



Siargo Ltd.



MF5600 Series

## **MEMS Mass Flow Meters**

SIARGO MEMS FLOW SENSING PRODUCTS

### **User Manual (VB.3)**



© 2018 Siargo Ltd.



Siargo Ltd.

# MEMS Mass Flow Meters

MF5600 Series

## User Manual

Document No. 07-2018-M2 EN

Issue date: 2018.07

Revision: VB.3

### **Siargo Ltd.**

3100 De La Cruz Boulevard,  
Suite 210,  
Santa Clara, CA 95054  
USA

Tel: +1(408)969.0368

Email: [info@siargo.com](mailto:info@siargo.com)

© Copyright 2018 by Siargo Ltd.

Siargo Ltd. and its subsidiaries reserve the rights to change the specifications and/or descriptions without prior notice. For further information and updates, please visit: [www.Siargo.com](http://www.Siargo.com)

## RESTRICTION ON USE

---

---

1. This meter is manufactured for general purpose industrial applications for flow measurements. Do not alter any hardware and software of the product. Any modifications might cause damage and unexpected events.
2. All practices for electronic device safety should apply.
3. Do not use this product in any environments where human safety may be at risk.
4. Only a qualified person from Siargo or a person who is accredited by Siargo can perform troubleshooting services to the product, Siargo is otherwise not liable for any consequences thereafter.

## SAFETY PRECAUTION

---

---

1. The product can be utilized to measure and/or monitor in-line mass flow rate of any clean, dry and preferably gases with constant concentration in industrial applications. For other special gases or variable concentration gases, the product may not function properly or even can be damaged. Please contact Siargo for further information.
2. The operational environments of the product are illustrated in the section of product specifications. If the product is used for other circumstances, the product may not function properly or even can be damaged.
3. Operation, installation, storage, and maintenance of the product must strictly follow the instructions illustrated in this user manual. Otherwise, unpredicted damage and even injuries or other severe situations could be induced. All the installation, storage, and maintenance of the product must be performed by skilled workers. This user manual should be placed near the product for easy access.
4. Before using the product, the user should read this user manual completely and in details so that the user is well understand all the important instructions.  
It is recommended that the product should be re-calibrated and serviced in every two years or at a time of desire.

## Contents

---

RESTRICTION ON USE .....	1
SAFETY PRECAUTION .....	1
Contents .....	2
1 Overview .....	3
2 Models and Selection .....	4
3 Product Description .....	4
4 Specifications .....	5
5 Installation .....	5
5.1 Physical Dimensions .....	5
5.2 Installation Instructions .....	6
5.3 Attentions .....	7
6 Operation and Communication .....	8
6.1 Cable Definition .....	8
6.2 LCD Display .....	8
6.3 RS485 Communication .....	8
6.4 4~20mA Output .....	8
6.5 Pulse Output .....	8
6.6 Setup via Buttons .....	9
7 RS485 Modbus Protocol (Mode P2) .....	12
8 Safety and Maintenance .....	15
8.1 Wetted Materials and Compatibility .....	15
8.2 Safety Precautions .....	15
8.3 Maintenance .....	15
9 Warranty .....	16
10 Customer Service and Order information .....	17

## 1. Overview

MF5600 mass flow meters are designed for general purpose precise industrial gas measurement, monitor or control. The design opts for applications where the display must be separately placed from the meter body or flow channel.


The meters are operated with the Siargo's proprietary MEMS thermal mass flow sensors together with the smart control electronics. The sensor probe surface is passivated with silicon nitride ceramic materials together with a water/oil proof nano-coating for performance and reliability. The current models are ready to connect to 12mm or 19mm lines while other pipe diameters can be offered as customized models. The meter body is made of stainless steel that is available for applications of most of the gases.

MF5600 Series MEMS Mass Flow Meters feature:


- ♦ Integrated MEMS mass flow sensors
- ♦ Large turn-down ratio over 30:1
- ♦ Excellent repeatability and accuracy
- ♦ Low pressure loss
- ♦ Various user interface for plug-and-play and remote communication or network
- ♦ Detachable LCD display for offsite data processing

### Working Principle and Package

The MEMS calorimetric sensor is installed at the flow channel wall forming a plate that serves as an additional flow conditioner from the boundary layer configuration resulting in a laminar flow. The mass flow measurement is established as the fluid carries heat away from the heater causing the redistribution of the temperature field. Accurate flow rate is obtained by calibration with the standard fluid at the preset conditions.

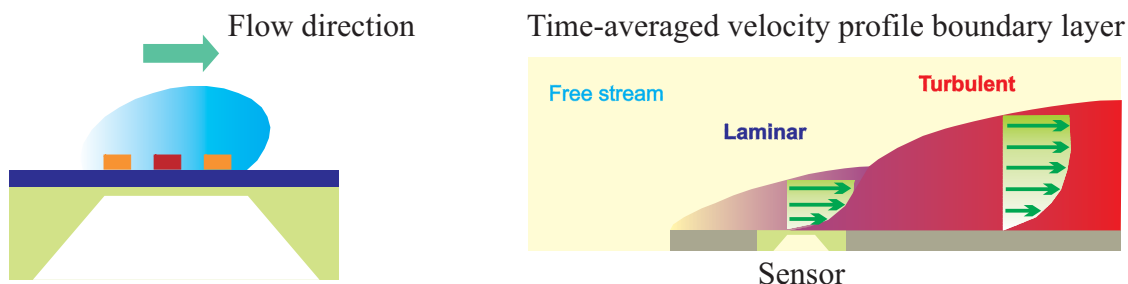

## 2. Models and Selection

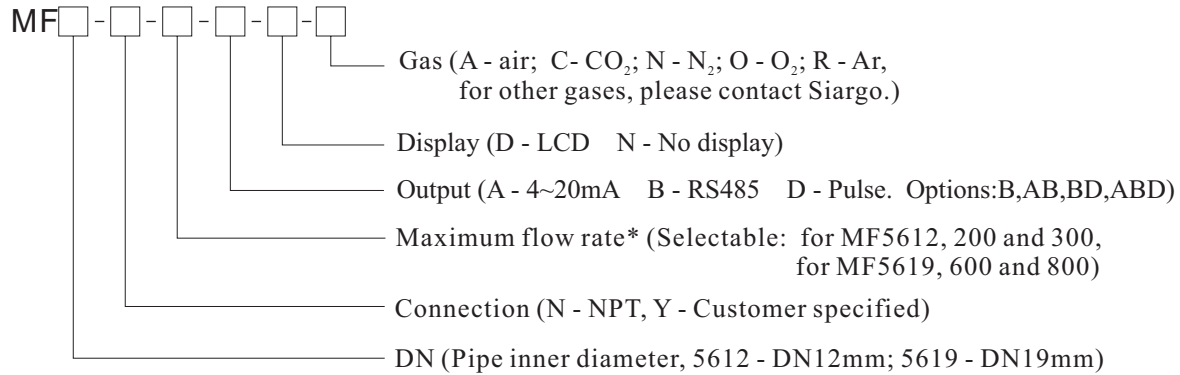


\* There is flow rate number only for unit SLPM. If other unit is selected, there must be flow rate number with unit together. For CO<sub>2</sub>, selectable: 200 SLPM (without 300 SLPM) for MF5612; 600 SLPM (without 800 SLPM) for MF5619.

Typical flow range:

Model	DN	Connection	Flow Range		
			SLPM	SCFM	NCMH
MF5612	12mm	1/2"	200	7	12
			300	10.5	18
MF5619	19mm	3/4"	600	21	36
			800	28	48

## 3. Product description

The parts are illustrated as below:

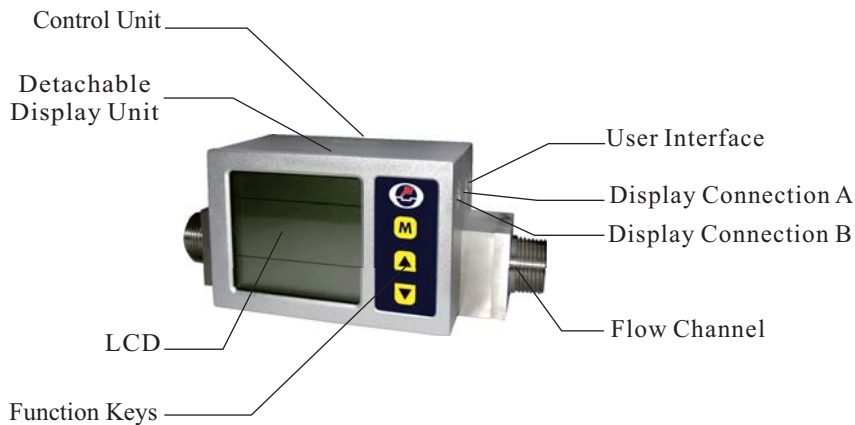


## 4. Specifications

Model	MF5612	MF5619	Unit
Max. Flowrate	200, 300	600, 800	SLPM
Min. Flowrate	0.3	0.8	SLPM
Turn-down ratio	30:1 (100:1 customizable)		
Accuracy	±(1.5+0.2FS)		%
Repeatability	±0.5		%
Power Supply	+12~+24 Vdc, 50mA		
Output	4~20mA; RS485; Pulse		
Display	LCD (Detachable)		
Display Unit	Instant flowrate: SLPM, Flow accumulation: SL		
Display Resolution	Instant flowrate: 0.001 SLPM, Flow accumulation: 0.001 SL		
Keyboard	3 Keys		
Max. Pressure	1.0		MPa
Storage Temperature	-20~+60		°C
Operating Temperature	-10~+55		°C
Humidity	<95%RH(No icing or condensation)		
Calibration	Air @20°C, 101.325 kPa		
Electrical Connection	Inputs/outputs Cable; Detachable LCD Cable		
DN	12	19	mm
Mechanical Connection	NPT 1/2	NPT 3/4	
Weight	1.62	2.05	kg

## 5. Installation

### 5.1 Physical Dimensions

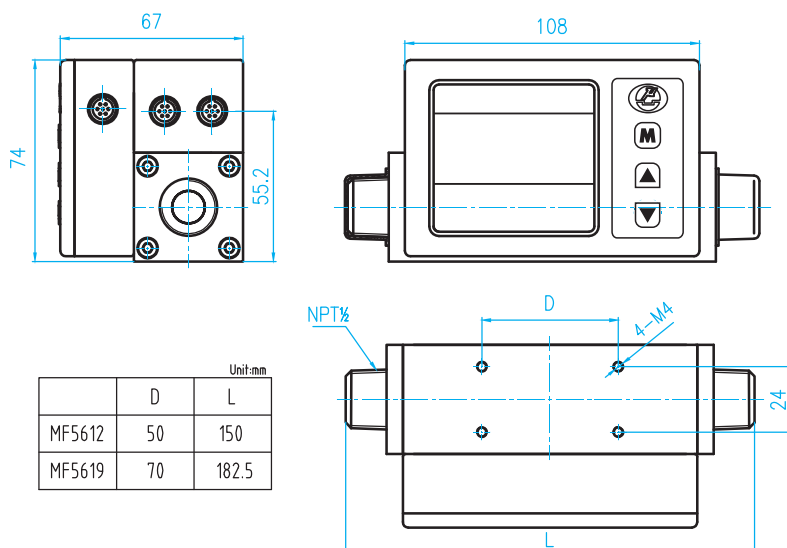

## 5.2 Installation Instructions


The product at the time of shipment is fully inspected for product quality and meets all safety requirements. Additional safety measures during the installation should be applied. This includes, but is not limited to leakage verification procedures, standard EDS (electrostatic discharge) precautions, DC voltage precautions, and heavy duty precautions. Other tasks such as calibration, part replacement, repair, and maintenance must only be performed by trained personnel. Upon requests, manufacturer will provide necessary technical support and/or training of the personnel.

Do not open the product cover or alter any part of the product. Any such actions will forfeit the terms of the warranty and cause the liability to any damages thereafter.


The product is preferably to be installed horizontally. Flow direction should be aligned with the arrow mark on the meter body. If the flow fluid may have particles or debris, a filter is strongly recommended to be installed upstream of the meter.

Please follow the following steps to complete the installation:


- a) Upon opening the package, the product physical integrity should be inspected to ensure no visual damage.
- b) Before installation of the product, please ensure that the pipe debris or particles or any other foreign materials are completely removed.
- c) Cautions during installation:
  - (i) It is preferably to first install the inlet end of the meter and then the outlet end of the meter; To ensure the measurement accuracy, an upstream straight pipe of length no less than 10DN and a downstream straight pipe of length no less than 5DN should be in place.

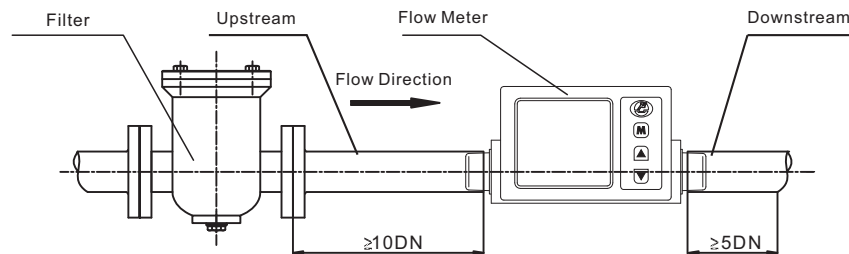


- (ii) If there is requirement of different pipe size at either upstream or downstream, the size of the pipe diameters should be larger than that of the selected meters. Please see detailed as below:

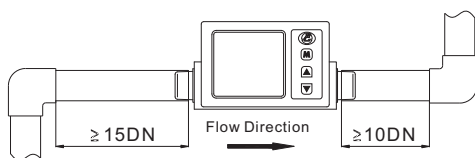


( a ) 90 degree elbow or T-piece

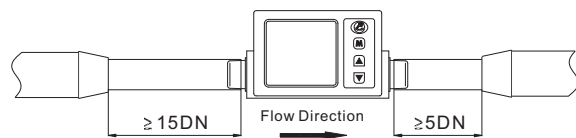

( b ) Reduction

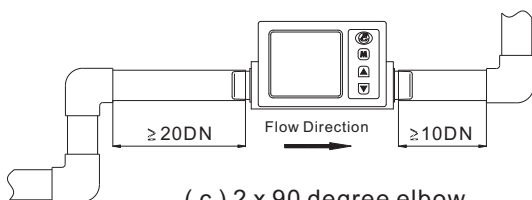


( c ) 2 x 90 degree elbow

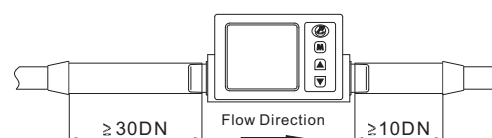


( d ) Expansion



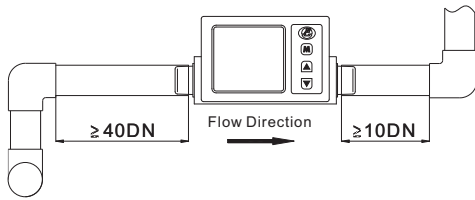

( e ) 2 x 90 degree elbow, 3-dimensional

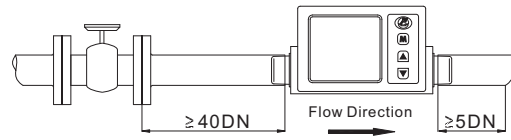

( f ) Control valve

- (iii) During installation, please make sure no any foreign materials (such as water, oil, dirty, particles, etc.) falling into the pipe.
- d) Connect electrical wires for LCD, and then electrical wires for inputs/outputs. Please pay special attention to power supply range (i.e., +12~+24 VDC) and power supply polarization (see the description on Electrical Interfaces in this manual).
- e) When connect the communication wires, please make sure that the wires are correctly connected to the proper ports on your data device/equipment.
- f) Turn on the power supply, and make sure that the LCD works correctly.
- g) Slowly open the valves at the both ends of the pipeline, and the meter should then start to measure the flow in the pipeline
- h) Completion of the installation.

### 5.3 Cautions

- a) Don't try to loose any build-in part of the product.
- b) Ensure electrical wires for the inputs/outputs to be reliably connected.
- c) Release all the installation stresses so that no stresses will be exerted on the product.
- d) The product should avoid strong electromagnetic interference sources nearby or periodic mechanical shocks to its body or pipeline.
- e) Slowly open/close valves to prevent abrupt pulse flow impact, which may damage the product.

## 6. Operation and Communication

### 6.1 Cable Definition

The electrical interfaces are defined as below:

Color	Definition
Red	Power Supply (+12 ~ +24 VDC)
Black	Power GND
Green	RS485 (A)
Brown	RS485 (B)
Violet	4 ~ 20mA Flow Signal Output
Transparent	4 ~ 20mA / Pulse GND
Yellow	Pulse Output



Figure 6-1. Accessory Cable 1 for Inputs/Outputs (Part number: IC7-150, Length: 1.5 m)



Figure 6-2. Accessory Cable 2 for Detachable LCD (Part number: IC7-30-IC7, Length: 30 cm; or Part number: IC7-200-IC7, Length: 2 m)

### 6.2 LCD Display

Normally, the LCD display looks as Fig 6-3a:

A standard litre (SL) represents a litre of the measured gas at 20°C and 101.325 kPa.

Alarm code E1~E5 (Fig 6-3b) :

E1	Sensor error	E4	EEPROM error
E2	ADC error	E5	Crystal error
E3	RTC error		

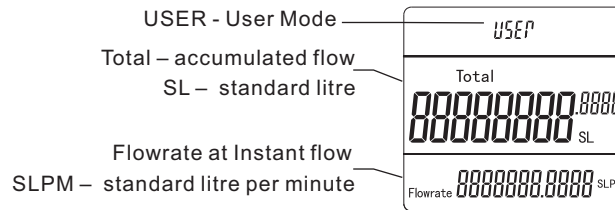


Figure 6-3a. Normal Display

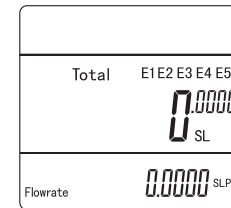


Figure 6-3b. Error alarm display

### 6.3 RS485 Communication

For purposes of computer control and networking, the RS485 is used for communication with the following settings:

- Baud rate (Bits per second): 57600(P0, Single-device communication) 9600(P1 & P2, Multi-device communications)
- Date bits: 8; Stop bits: 1;
- Parity: None; Flow control: None.

### 6.4 4~20mA Output

For customers who use 4~20mA output. The connection of the loop load resistor is illustrated as Figure 6-4:  $R_L$  (max) = 850Ω (24Vdc power supply)

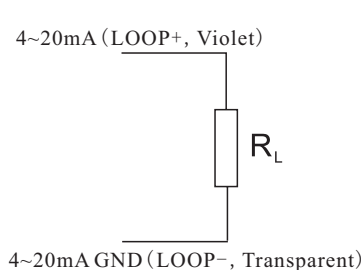


Figure 6-4. 4~20mA External Connection


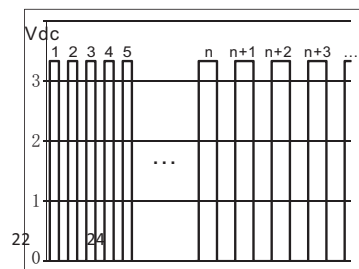


Figure 6-5. Even square wave of accumulated flow

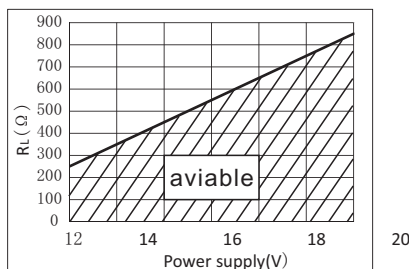


### 6.5 Pulse Output

The pulse output is in the form of even square wave that is composed of 3.3V signal high and 0V signal low, and each pulse can be programmed to 0.01 SL, 0.1 SL, 1 SL or 10 SL, respectively. (default is 1 SL) .

## 6.6 Setup via Buttons


### 6.6.1 Button definition

Three buttons:

-  : Selection/confirmation of a setting
-  : Scroll up the setup menu
-  : Scroll down the setup menu

### 6.6.2 Operation

(1) The user interface (Figure 6-6):

Button  is used for function selection. After press it, the menu asks for password (authentication mode).

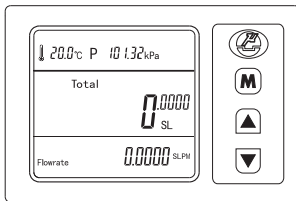


Figure 6-6 User Interface

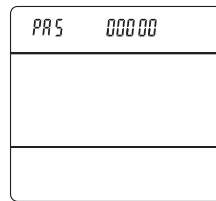


Figure 6-7 Password menu

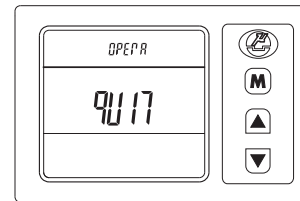





Figure 6-8 Function setup menu

(2) Password interface (Figure 6-7):

In the password menu, the flow measurement will not be interrupted, whereas the first line of the LCD display will show the password menu as Figure 6-8:


- The password consists of six numeric digits. The blinking digit can be assigned a numeric value, which can be selected from 0-9 through the up/down buttons /.
- After selecting a desirable value, press  to conform the selection, and the proceed to the next digit.
- After the password is correctly set, the meter enters the function setup menu. Otherwise, the meter returns back to the user mode. (**NOTE: The default password is 11111**)

(3) Function setup menu (Figure 6-7):





**▲ Caution: If you want change any settings, please refer to the manual, otherwise the meter maybe work abnormally.**

A 

“qUIT”, exit from the setup mode (this is the default option).

B 

“UnITACC”, select *accumulated flow units*.

- Press , the display will show the accumulated flow units menu; if the value is “--n3--”, the accumulated flow unit is Nm<sup>3</sup>; if the value is “--SL--”, the accumulated flow unit is SL.
- Press / to switch in two units.
- After selection, press  to confirm and exit.

C *UnITTyPE* “UnITTyPE”, select *instant flow units*.

- Press **(M)**, the display will show the instant flow units menu; if the value is “--n3--”, the instant flow unit is Nm<sup>3</sup>/h; if the value is “--SL--”, the instant flow unit is SLPM.
- Press **(▲/▼)** to switch in two units.
- After selection, press **(M)** to confirm and exit.

D *InTERVAL* “InTERVAL”, set response time.

- Press **(M)**, the display will show the response time (default value is 125 ms).
- Press **(▲/▼)** to set as other response time, 250 ms, 500 ms, 1000 ms (1 s), 2000 ms (2 s), 4000 (4 s).
- After selection, press **(M)** to confirm and exit.

E *SEt GCF* “SET GCF”, Set the gas correction factor. See detailed operation in Figure 6-11.

F *PrOTOCOL* “PrOTOCOL”, select communication protocols. .

- Press **(M)**, the display will show the protocol menu; P0-000 means mode 0, it is Single-device communication mode; P1-xxx (between 001 and 255) means mode 1, Modbus mode, it is Multi-device communication mode. P2-xxx (between 001 and 255) means mode 2, reserved, it is Multi-device communication mode. (e.g, P1-153 means the meter is working in Multi-device communication mode, protocol is Modbus, and the address is 153.)
- Press **(▲/▼)** to switch in two communication modes.
- After selection, press **(M)** to confirm and exit.

G *SEt Addr* “SET Addr”, Set the address for *Multi-device communication mode*.

**Notes: The default address is 255.**

H *SEt PAS* “SET PAS”, Set the password.

**Notes: Please remember the new password and placed it properly.**

I *OFFSEt* “OFFSET”, reset the offset of the meter. See detailed operation in Figure 6-11.

J *CLear<sup>ACC</sup>* “CLEAR ACC”, reset the flow accumulation reading to zero. See detailed operation in Figure 6-11.

(4) Communication Modes switches (Figure 6-9, Figure 6-10)

A. From *Single-device communication* to *Multi-device communication*

- Set the address of the meter (value of *SEt Addr*) as (3).E. such as 255;
- Set the meter to *Multi-device communication mode* (select value of *PrOTOCOL* to P1-255 or P2-255) as (3).D;
- After set, the address will show on the LCD.

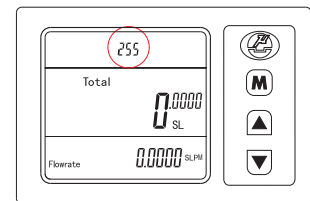


Figure 6-9 Multi-device communication mode

B. From *Multi-device communication* to *Single-device communication*

- Set the meter to Signal-device communication mode (select value of *PrOTOCOL* to P0-000) as (3).D;
- After set, no address will show on the LCD.

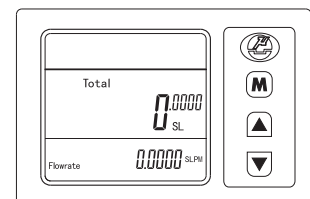


Figure 6-10 Single-device communication mode

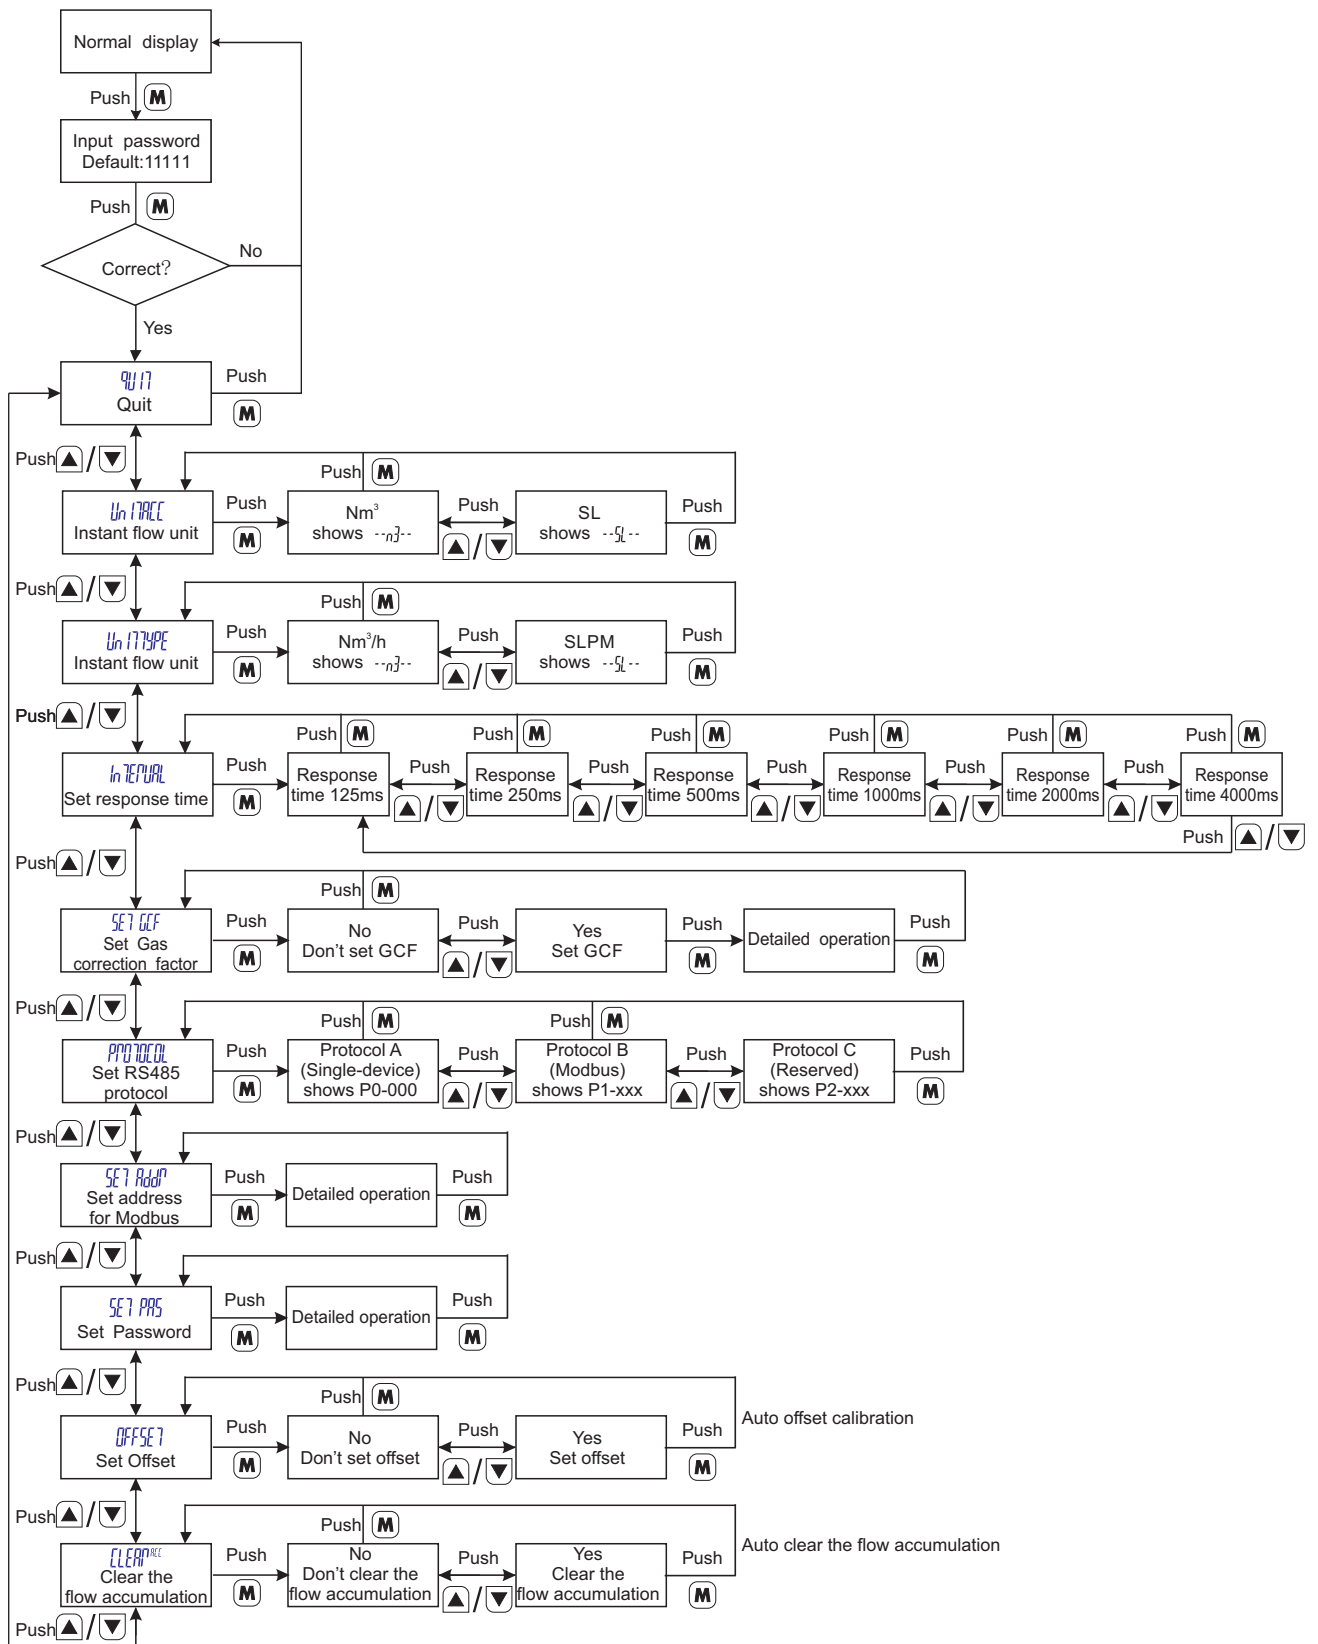



Figure 6-11 Button operation

## 7.RS485 Modbus Protocol (Mode P2)

Communication mode P2 is based on the standard Modbus communication protocol. It supports either single meter communication or multi-meter networking.

### 7.1 Hardware connection

Based on standard Modbus RTU mode, a master (PC or PLC) can communicate with several slaves (MF5600), setting parameter or getting data. The hardware layer is TIA/EIA-485-A. The connection is as below:

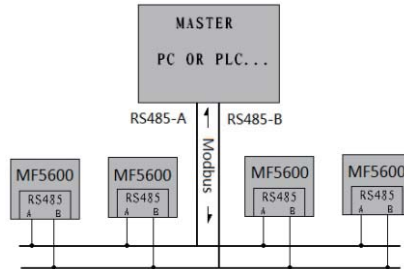

### 7.2 Communication parameter

The UART parameter is shown as below table:

Communication parameter	protocol
	RTU
Baud rate(Bits per second)	9600 bps
Start bits	1
Data bits	8
Stop bits	1
Even/Odd parity	None
Bits period	104.2μs
Bytes period	1.1458ms
Maximum data length	20
Maximum Nodes	247

### 7.3 Frame

The framing function is accord with The Standard Modbus RTU framing, which is shown as below:

Start_bits	Address	Function code	Data	CRC	Stop_bits
T1-T2-T3-T4	8Bit	8Bit	N 8Bit ( 20≥n≥0 )	16Bit	T1-T2-T3-T4

- Start\_bits:** 4 periods bit time, to indicate a new frame.
- Address:** The Modbus address, can be set as 0 to 255 except 157. 0 is broadcast address.
- Function code :** Define the action that MF5700 should takes, or indicate that which code the MF5700 is responding .
- Data:** Including the address of register, length of data and the data.
- CRC:** CRC verify code , the low byte is flowed by high byte. For example, the 16bit CRC code is divide as BYTE\_H BYTE\_L , in the frame, the BYTE\_L goes first ,then the BYTE\_H, at last ,is the stop signal .
- Stop\_bits:** 4 periods bit time , to indicate that the current framing is over.

## 7.4 Function code

MF5600 Modbus Function-code is a subclass of Standard Modbus Function-code. By using these function-code, We can set or read the registers of MF5600.

They are shown as below table:

CODE	name	action
0x03	Read register	Read register (one or more)
0x06	Set single register	Write one single 16bit register
0x10	Set multi registers	Write multi registers

## 7.5 Registers

Mf5600 has several registers. We can get the information (such as “address”, “flow rate” and so on) form reading these registers, or we can write into some of the registers for setting parameters of MF5600.

The registers are shown as below table:

NAME	Description	REGISTER	Modbus
Communication Protocol	The communicate protocol of Mf5600 (RW)	0x0000	40000(0x0000)
Address	The address of MF5700 flow meter (RW)	0x0001	40001(0x0001)
Flow Rate	The current flow rate (R)	0x0002 ~ 0x0003	40002(0x0002)
Total	The accumulative total of flow rate (RW)	0x0004 ~ 0x0006	40004(0x0004)

\* R-read only, W-write only, RW-read and write.

<b>Communicate Protocol</b>	0x0000	WRITE	A
		READ	A
Description	Protocol mode		
Value type	UINT16		
Detail	Value = 0: Mode A, Siargo flow meter communicate mode Value = 1: ModBus mode		
<b>Flow meter Address</b>	0x0001	WRITE	A
		READ	A
Description	The address of flow meter in modbus protocol		
Value type	UINT16		
Detail	Value from 1 to 255 except 157 (0x9d), 0 is broadcast address.		

<b>Flow Rate</b>	0x0002 ~ 0x0003	WRITE	N
		READ	A
Description	The current flow rate		
Value type	UINT32		
Detail	<p>Flowrate = (value(0x0002) * 65536 + value(0x0003) ) /1000</p> <p>Example:</p> <p>When the LCD shows 20.34 SLPM, we can get “0” form register 0x0002 and “20340” form register 0x0003.</p> <p>Thus, flowrate = (0*65536 + 20340)/1000= 20.340</p>		
<b>Total</b>	0x0004 ~ 0x0006	WRITE	A
		READ	A
Description	The accumulative total of flow		
Value type	UINT32 + UINT16		
Detail	<p>V1 = value (0x0004) * 65536 +value (0x0005) ;</p> <p>V2 = value (0x0006)</p> <p>Total = (V1 *1000 + V2)/1000 ;</p> <p>Example:</p> <p>When the LCD shows 3452.245NCM, we can get “0” from register 0x0004, “3452” from register 0x0005, “245” from register 0x0006.</p> <p>Then, V1 = 0*65536 + 3452;</p> <p>V2= 245</p> <p>Total =(3452*1000+245) /1000=3452.245</p>		



## 8.Safety and Maintenance

### 8.1 Wetted Materials and Compatibility

The meter body and pipe are made of 304 stainless steel. Sensors comprise of silicon, silicon nitride and silicon dioxide and the sensor surfaces are passivated with silicon nitride and silicon dioxide. The electronic sealing is provided by RTV (room temperature vulcanizing) silicone sealant WR-704 composed of  $\text{HOCH}_3(\text{SiO})_n\text{CH}_3\text{H}$ .

### 8.2 Safety Precautions

The product is designed for use with general purpose gases such as air and nitrogen. It is advised that the products are best used for non-explosive clean gases. The sensors cannot be used for gas metrology of fluoride or fluoride containing gases. For updates of the product certification information, please contact manufacturer or visit [www.Siargo.com](http://www.Siargo.com). Use for other gases such as extreme corrosive and toxic may cause the product malfunctioning or even severe damages. The product sealing is ensured to work under working pressure of 1.0 MPa and is leakage proof before the shipment. But cautions and further leakage test are important at installation as well since any leakage could cause severe safety issue. The power supply for this product is 12~24 VDC, all precautions and measures for electrical voltage handling must apply.

**Attention: any alternation and/or improper use of the product without the permission of the manufacturer can cause unpredicted damages and even injuries or other severe situations. Siargo Inc or any of its employees, subsidiaries shall not be hold and indemnified against such consequences due to such circumstances via improper use of the product.**

### 8.3 Maintenance

**Attention: without prior permission of the manufacturer, please do not attempt to alter any parts of the product as it may cause unrecoverable damages. If there are questions or doubts, please contact manufacturer immediately before further actions. Please ensure the DC power is off before disassembling the sensor.**

All maintenance of the sensor should be done by trained and certified personnel by Siargo Ltd.

## 9. Warranty

Siargo warrants the products sold hereunder, properly used and properly installed under normal circumstances and service as described in the user's manual, shall be free from faulty materials or workmanship for 180 days for OEM products, and 365 days for non-OEM products from the date of shipment. This warranty period is inclusive of any statutory warranty. Any repair or replacement serviced product shall bear the same terms in this warranty.

Siargo makes no other warranty, expressed or implied and assumes no liability for any special or incidental damage or charges, including but not limited to any damages or charges due to installation, dismantling, reinstallation or any other consequential or indirect damages of any kind. To the extent permitted by Law, the exclusive remedy of the user or purchaser, and the limit of Siargo's liability for any and all losses, injuries or damages concerning the products including claims based on contract, negligence, tort, strictly liability or otherwise shall be the return of products to Siargo, and upon verification by Siargo to prove to be defective, at its sole option, to refund, repair or replacement of the products. No Action, regardless of form, may be brought against Siargo more than 365 days after a cause of action has accrued. The products returned under warranty to Siargo shall be at user or purchaser's risk of loss, and will be returned, if at all, at Siargo's risk of loss. Purchasers or users are deemed to have accepted this limitation of warranty and liability, which contains the complete and exclusive limited warranty of Siargo, and it shall not be amended, modified or its terms waived except by Siargo's sole action.

This warranty is subject to the following exclusions:

- a). Products that have been altered, modified or have been subject to unusual physical or electrical circumstances indicated but not limited to those stated in the user's manual or any other actions which cannot be deemed as proper use of the products
- b). Siargo does not provide any warranty on finished goods manufactured by others. Only the original manufacturer's warranty applies.

## 10. Customer Service and Order information

Siargo Ltd. is making every effort to ensure the quality of the products. In case of questions, and or product supports, please contact customer service at the address listed below. We will respond your request in a timely fashion and will work with you toward your complete satisfaction.

Customer service and all orders should be addressed to

### Headquarters

Siargo Ltd.  
3100 De La Cruz Boulevard, Suite 210,  
Santa Clara, California 95054,USA  
Phone: +01(408)969-0368  
Email: [info@Siargo.com](mailto:info@Siargo.com)

### Representative in Japan

Marubeni Information Systems Co., Ltd.  
Device Solutions Department  
14th Floor, Shinjuku Garden Tower,  
3-8-2, Okubo, Shinjuku-ku, Tokyo 169-0072, Japan  
Phone: +81-3-4243-4160  
Fax: +81-3-4243-4198

### Representative in Europe

IDENTIC GmbH  
In der Siedlerruh 24  
69123 Heidelberg / Germany  
Phone: +49-(0)6221-7509777  
Fax: +49-(0)6221-7509779  
Email: [info@identic.de](mailto:info@identic.de)

For orders, please provide accurate and full post address. Siargo will not ship to P.O. Boxes or via a third party.

For further information and updates, please visit [www.Siargo.com](http://www.Siargo.com).

## Appendix: Revision History

### Revision B.3 (July 2018):

- ✎ Add the RS485 Modbus Protocol (*7.RS485 Modbus Protocol (Mode P2)*).

### Revision B.2 (April 2018):

- ✎ Updated the *Function button (Fun)* to *Menu button (M)*.

### Revision B.1 (July 2017):

- ✎ Corrected the pulse output setting (6.5 Pulse Output);
- ✎ Added the revision history (Appendix).